


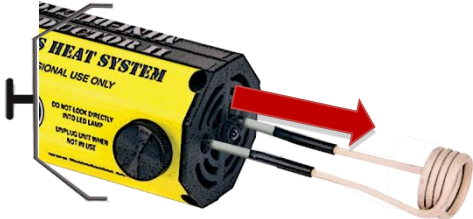


MINI-DUCTOR[®] II + QUICK START GUIDE



YES	NO
 <p>Read Manual Before Use</p>	
<p>Good</p> 	<p>Bad</p> 
<p>Good Gap</p> 	<p>Too Tight</p> 
 <p>Screws tight, coil fully inserted</p>	 <p>Screws loose, coil NOT fully inserted</p>
 <p>After bending coil, always re-tighten screws</p>	

WARNING: This Quick Start Guide IS NOT a substitute for reading the MINI-DUCTOR II + Instruction Manual! You MUST read the instruction manual before use! Failure to read and follow instruction manual may void the warranty. © 2014 Induction Innovations Inc.


YES



NO

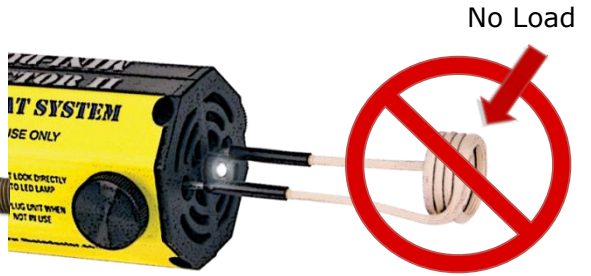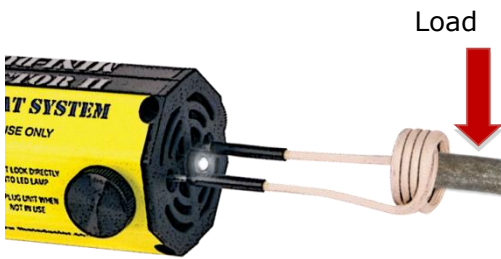

Normal

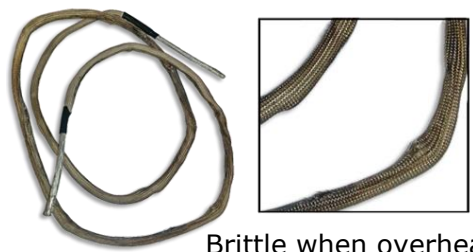

Brittle when overheated



Max On

